

Type	TX Frequency Range			RX Frequency Range			Jumper (JP40**)						Remarks	
	HF	VHF	UHF	HF	VHF	UHF	04	05	06	07	08	09	FM CH Step	RPT Shift
B1	BAND 1	144-146	430-440	0.1-30 / 50-54 / 87.5-108	144-146	430-440	X	X	X		X		12.5 / 25kHz	0.1 / 0 / 0.6 / 7.6 MHz
B2	BAND 1	144-146	430-440	0.1-33 / 33-56 / 76-108	108-154	420-470		X	X		X		12.5 / 25kHz	0.1 / 0 / 0.6 / 7.6 MHz
B3	BAND 2	140-154	420-470	0.1-33 / 33-56 / 76-108	108-154	420-470			X		X		12.5 / 25kHz	0.1 / 0 / 0.6 / 7.6 MHz
C1	BAND 3	144-146	430-440	0.1-30 / 50-54 / 87.5-108	144-146	430-440	X	X	X	X	X		12.5 / 25kHz	0.1 / 0.5 / 0.6 / 1.6 MHz
C2	BAND 3	144-146	430-440	0.1-33 / 33-56 / 76-108	108-154	420-470		X	X	X	X		12.5 / 25kHz	0.1 / 0.5 / 0.6 / 1.6 MHz
C3	BAND 4	140-154	420-470	0.1-33 / 33-56 / 76-108	108-154	420-470			X	X	X		12.5 / 25kHz	0.1 / 0.5 / 0.6 / 1.6 MHz
D1	BAND 5	144-146	432-438	0.1-30 / 50-54 / 87.5-108	144-146	432-438	X	X	X			X	12.5 / 25kHz	0.1 / 0 / 0.6 / 1.6 MHz
D2	BAND 5	144-146	432-438	0.1-33 / 33-56 / 76-108	108-154	432-438		X	X			X	12.5 / 25kHz	0.1 / 0 / 0.6 / 1.6 MHz
H1	BAND 6	144-148	430-450	0.1-30 / 50-54 / 76-108	144-148	430-450	X	X	X	X		X	5 / 25kHz	0.1 / 1 / 0.6 / 5 MHz
H2	BAND 6	144-148	430-450	0.1-33 / 33-56 / 76-108	108-154	420-470		X	X	X		X	5 / 25kHz	0.1 / 1 / 0.6 / 5 MHz
E1	BAND 7	144-146	430-440	0.1-30 / 50-54 / 87.5-108	144-146	430-440	X	X	X		X	X	12.5 / 25kHz	0.1 / 0 / 0.6 / 1.6 MHz
E2	BAND 7	144-146	430-440	0.1-33 / 33-56 / 76-108	108-154	420-470		X	X		X	X	12.5 / 25kHz	0.1 / 0 / 0.6 / 1.6 MHz
E3	BAND 8	140-154	430-470	0.1-33 / 33-56 / 76-108	108-154	420-470			X		X	X	12.5 / 25kHz	0.1 / 0 / 0.6 / 1.6 MHz

	160m	80m	40m	30m	20m	17m	15m	12m	10m	6m
Band 1	1.815-1.890	3.500-3.800	7.000-7.100	10.100-10.150	14.000-14.350	18.068-18.168	21.000-21.450	24.890-24.990	28.000-29.700	50.000-52.000
Band 2	1.800-2.000	3.500-4.000	7.000-7.500	10.000-10.500	14.000-14.500	18.000-18.500	21.000-21.500	24.500-25.000	28.000-30.000	50.000-54.000
Band 3	1.810-2.000	3.500-3.800	7.000-7.100	10.100-10.150	14.000-14.350	18.068-18.168	21.000-21.450	24.890-24.990	28.000-29.700	50.000-54.000
Band 4	1.800-2.000	3.500-4.000	7.000-7.500	10.000-10.500	14.000-14.500	18.000-18.500	21.000-21.500	24.500-25.000	28.000-30.000	50.000-54.000
Band 5	1.820-1.850	3.500-3.800	7.000-7.100	10.100-10.150	14.000-14.350	18.068-18.168	21.000-21.450	24.890-24.990	28.000-29.700	50.000-54.000
Band 6	1.800-2.000	3.500-4.000	7.000-7.300	10.100-10.150	14.000-14.350	18.068-18.168	21.000-21.450	24.890-24.990	28.000-29.700	50.000-54.000
Band 7	1.810-1.850	3.500-3.800	7.000-7.100	10.100-10.150	14.000-14.350	18.068-18.168	21.000-21.450	24.890-24.990	28.000-29.700	50.200-51.200
Band 8	1.800-2.000	3.500-4.000	7.000-7.500	10.000-10.500	14.000-14.500	18.000-18.500	21.000-21.500	24.500-25.000	28.000-30.000	50.000-54.000

Reset: Press and holding [F] and [V/M] keys at the same time when turning power on.